


SHELFTRACK with **SUPERSLIDE**
Choose Your Hardware

- | | |
|---------------------|-----------------------------|
| A Hang Track | D Closet Rod |
| B Standard | E Closet Rod Support |
| C Bracket | F Closet Rod End Cap |
| | G Shelf End Cap |

ShelfTrack® Installation Tips

1. Use the correct hardware

Select the hardware that is right for your wall type:

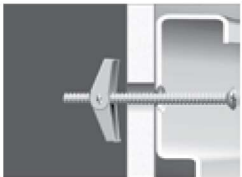

Drywall

Drill 1.3cm/ 0.5" holes and secure to the wall with toggle bolts.



Studs

Secure to the wall with #12 x 5cm/ 2" pan head screws at stud locations.



Concrete


Drill 0.6cm/ 0.25" holes insert #12 wall anchors and secure to the wall with #12 x 5cm/ 2" pan head screws

2. Hang track location

Track can be installed at any height. However, for maximum adjustability and strongest installation, install track flush to ceiling and screw into header behind wallboard/ plaster. When working with Drywall/ Plasterboard, Stud installation is recommended whenever possible for the strongest fix.


3. Determine length and spacing of standards

Standards are available in several lengths, depending on the number of shelves you require and the spacing between the shelves. The closer the standards are placed together, the stronger the installation. Standards should be spaced no more than 60cm/ 24" apart, and no more than 10cm/ 4" from the end of the shelf.

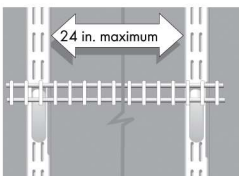

4. Securing standards

Each standard must be secured to the wall with one screw at the closest hole to the centre of the standards. When using toggle bolts, remove toggle, put bolt through standard and re-attach toggle to bolt before placing standard on track.

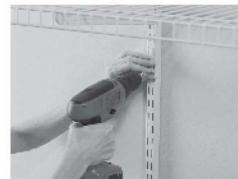

5. Attaching brackets

Attach brackets at desired shelf height.

NOTE: Always match bracket size to shelving depth except when using Shelf & Rod Shelving. Always use 30.5cm/ 12" brackets for this type of shelving.


6. Cutting shelving, closet rods, and hang tracks

Wire shelving can be cut using bolt cutters or a hacksaw. Closet rods/ hang rail can be cut using a pipe cutter (recommended) or a hacksaw. Hang Tracks can be cut with a hacksaw.

7. Corners

When two shelves come together in a corner, use a corner shelf support to connect them. Use a corner closet rod to allow clothes to slide uninterrupted around corners.

NOTE: SuperSlide closet rod supports should be placed where closet rods join.

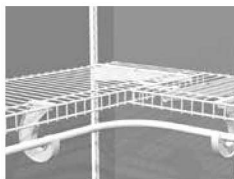

8. End caps

Add caps to every exposed wire on both ends of each shelf and to the ends of closet rods. End caps protect you, your clothing and the shelving materials.